



REMOTE CONTROL (RE23)

OPERATING INSTRUCTIONS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION AND LEAVE
A COPY WITH THE END USER FOR FUTURE REFERENCE

Introduction of CTC Remote Control

Product Name: CTC Remote Control (RE23)

Associated Product: RICOMAN CTC Panel (R101107)*

Power: 2X AAA batteries (not supplied)

Communication Protocol: RF-2.4G

Control Range: 20 Metres (without obstacle)

Groups of Lights: One controller can control up to 99 groups of lights.
There is no limit to the number of light to a group.

ID of Light: ID can be from 1 to 99


Replicating another Controller: Every remote controller has its own ID number, one controller can copy and use the ID number of another controller to control the same light, and recover its initial ID number.

Control Functions:

- On/Off
- Dimming
- Colour temperature adjusting
- Two scenes recall
- Auto dimming
- Night light

***Note:** Any single light can be linked with 1 of RE22 (wall mounted control) and/or RE23 (remote control).

Important: Control should only be used as a secondary control switch. Resync will require all luminaires to be switched off from the primary control switch.

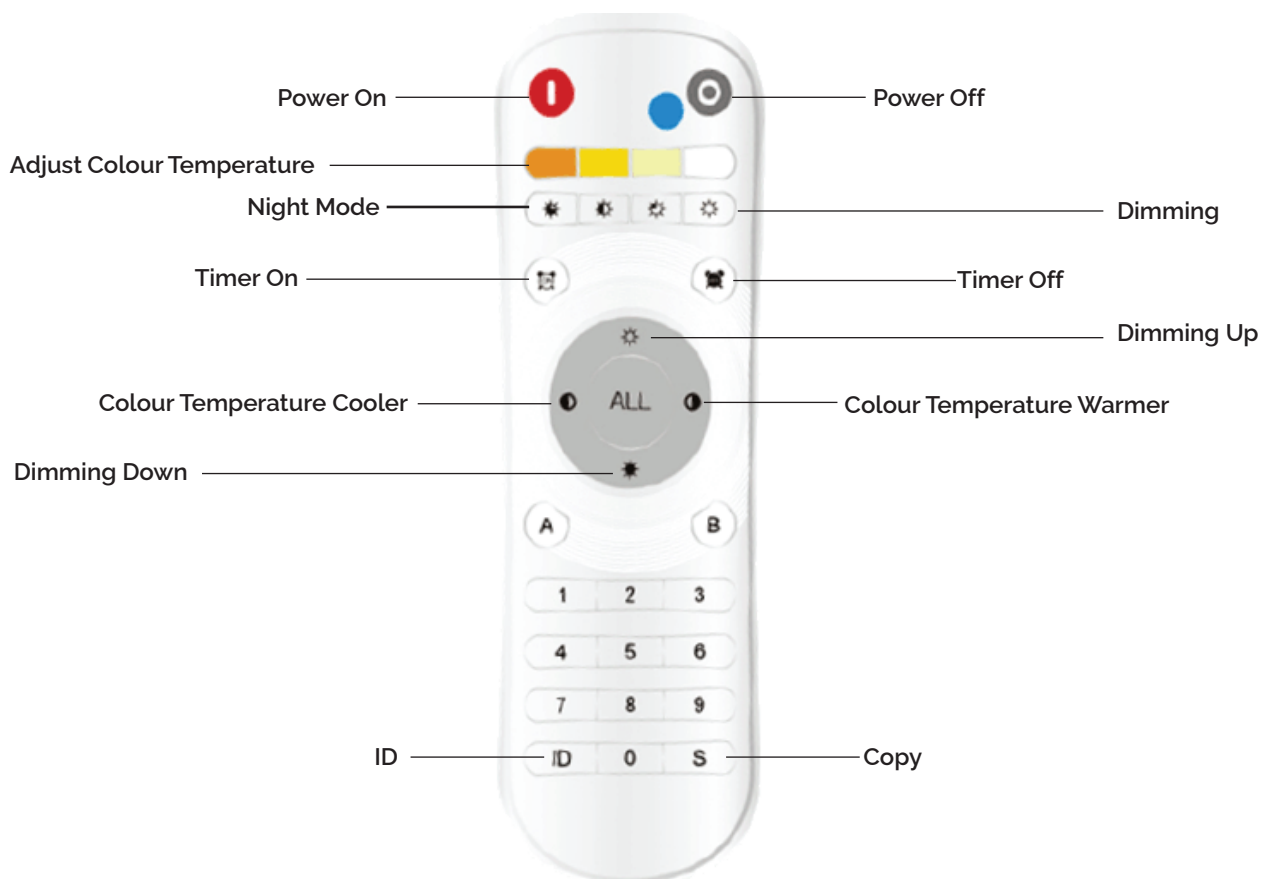

REMOTE CONTROL (RE23)

OPERATING INSTRUCTIONS

Operating Instructions

Setting Light ID number

1. Turn OFF the light by the primary switch for at least 3 seconds. (Steps 2 and 3 must be completed within 10 seconds.)
2. Press the number(s) on the controller of your desired ID number and then press the 'ID' button
3. Repeat step 2. Once this has been completed the light will flash once.
4. Turn off the light by the primary switch within 10 seconds to complete the setup.

Timing On/Off

Press the ID number of the light you want to set, press 'ID' button

To Set: Press the number button 1-99, press 'Timer on' or 'Timer off' button, then complete. timing units is 10 minutes.

To Cancel: Press 'O' button then 'Timer on' or 'Timer off' button to cancel timing.

Night Light Mode

Press the 'Night mode' button when the light is turned off to enter night mode.

Scene Mode

Save

1. Adjust the light to your preference
2. Press the ID number of the light
3. Press 'ID' button and then press button 'A' or 'B'. Once complete the indicator will flash one time.

Recall

1. Press the ID number of the light
2. Press button 'A' or 'B'.

Control the Lights

See previous page for remote controller button functions.

Control the single group: press the ID number of the lamp you want to control and then press one functional button (on/off, colour temp, brightness).

All-control Model: press 'All' button to control all groups

Copy the ID of a Controller

Press and hold the 'S' button on one controller power button on another controller at the same time, hold for six seconds. Once complete the indicator will flash three times.

Recovery: Press and hold the 'S' and 'All' buttons on the controller which the ID has been copied for six seconds. Once complete the indicator will flash three times.

Circle Mode

Press the ID of the light, then press 'Colour temperature cooler' then 'Colour temperature warmer' then 'Dim down' and then 'Dim up' buttons. (left, right, down, up)

WARRANTY

This product is in warranty in the UK for a period of 3 year from the date of purchase. The guarantee is invalid in the case of improper use, installation, tampering, removal of the Q.C. date label, installation in an improper working environment or installation not according to the current edition of the IEE Wiring Regulations. Should this product fail during the warranty period, it will be replaced free of charge, subject to the aforementioned conditions and return of the faulty unit. We do not accept responsibility for any installation costs associated with the replacement of this product. Your statutory rights are not affected.